

GS10 SMS COMMANDS

NO.	SMS Name	Format	Reply
1	Status Check	STATUS#	acc:1,sf:0,gsm:6-31,gps:1-17
2	Parameter Check	PARAM#	id:863019171376959 ip:WW9006.gpsog.com 9006 apn:cmnet-user-password,phone:18201982253- ,time:10-300-300
3	Lat. &Long. Check	WHERE#	ID:863019171376959 Spd:000 T:20/8/5 6:23 bat:100 http://maps.google.com/maps?q=N31.38416,E121.42499
4	Version Check	VERSION#	GS10 WW 06 V 1 0 20200826
5	Add SOS Number (With the area code)	SOS,A,Number1,Number2,Number 3#	SET OK
6	Delete SOS Number (With the area code)	SOS,D,Number1,Number2,Number 3#	SET OK
7	Delay Defense setting (A:1~ 60 min,set delay defense time; default setting is 10 min)	DEFENSE,A#	SET OK
8	Query delay defense setting	DEFENSE#	DEFENSE:0
9	Device Reboot	RESET#	RESET OK
10	Vibration Alarm setting (M=0~3; Alam method,0 only Platf, 1 SMS+GPRS, 2 GPRS+SMS+CALL, 3 GPRS+CALL)	SENALM,ON,M#	SET OK
11	Turn off vibration alarm	SENALM,OFF#	SET OK
12	Query vibration setting	SENALM#	SENALM:1 CALL:0 SMS:0
13	Server setting:Domain setting (the last "0" stands for: TCP)	SERVER,1,DOMAIN,PORT,0# SERVER,0,IP,PORT,0#	SET OK
14	Center number setting (You must first set up the SOS number)	CENTER,A,86...#	SET OK
15	Delete center number	CENTER,D#	SET OK
16	Power off alarm Inquiry	POWERALM#	POWERALM:1 CALL:0 SMS:0
17	Turn off power off alarm (default setting is on)	POWERALM,OFF#	SET OK
18	Power on alarm setting (M=0~2; 0 GPRS, 1 SMS +GPRS, 2 GPRS+SMS+CALL 2 GPRS+CALL T1=2~60s (default setting is 5s) ; Power off time T2=0~3600s (default setting is 30s))	POWERALM,A,M,T1,T2#	SET OK
19	Query relay control status	RELAY#	RELAY:0
20	Relay setting (A=0/1; 0 power on,1 power off ; Send instructions from the phone where the center number is located)	RELAY,A#	OK
21	Set the heartbeat packet interval	HBT,T1,T2# T1=1~600min, ACC ON Heartbeat packet upload interval T2=1~600min, ACC OFF Heartbeat packet upload interval	SET OK
22	Query the heartbeat interval	HBT#	HBT:5,5
23	Vibration sensitivity setting (Value range: 0-255, 5 is the existing default reference value)	SENSORRANGE,5#	SET OK
24	Vibration sensitivity inquiry	SENSORRANGE#	SENSORRANGE:5
25	Timer,T1,T2# T1=5~60s, Time interval of GPS data be uploaded when ACC is on T2=5~60s, Time interval of GPS data be uploaded when ACC is off	TIMER,T1,T2#	SET OK
26	Time interval of GPS data be uploaded	TIMER#	TIMER,10,10#
27	SENSOR CONTROL GPS (A=0-300 minutes 0 stands for GPS always on)	SENDS,A#	SET OK
28	Query SENSOR Control GPS	SENDS#	SENDS:5

29	Low battery alarm setting (M=0~3 0 GPRS, 1 GPRS+SMS 2 GPRS+SMS+CALL 3 GPRS+CALL)	BATALM,ON,M#	SET OK
30	Turn off low battery alarm	BATALM,OFF#	SET OK
31	Query low battery alarm	BATALM#	BATALM:1 SMS:1 CALL:0
32	Over Speed Alarm (B=5~600 S; C=1~ 255km/h; M=0~3; Alam methods, 0 GPRS, 1 SMS +GPRS; 2 GPRS+SMS+CALL 3 GPRS+CALL)	SPEED,ON,B,C,M#	SET OK
33	Turn off overspeed alarm	SPEED,OFF#	SET OK
34	Query over speed alarm	SPEED#	speed:0-0-0 SMS:0 CALL:1
35	Query map connection	URL#	ID:863019171376953 Spd:000 T:20/8/26 7:16 bat:100 http://maps.google.com/maps?q=N31.38416,E121.42483
36	Setting SOS Alarm M=0~3; 0 GPRS, 1 SMS +GPRS; 2 GPRS+SMS+CALL 3 GPRS+CALL)	KEYALM,ON,M#	SET OK
37	APN Setting	APN,APN name#	APN:CMNET,,
38	Time Zone setting A: E/W; E timezone, W timezone; default: E B: 0~12; timezone; default: 8 C: 0/15/30/45; half timezone; default: 0	GMT,A,B,C#	OK!The terminal will restart after 30 seconds!
39	Query the current parameter Settings	GMT#	Currently Timezone(GMT):E,8,0
40	External voltage detection	POWERLEVEL#	OK,level:12.500000
41	Turn off ACC alarm	ACCALM,OFF#	SET OK
42	ACC Change Alarm M=0~3; 0 GPRS, 1 SMS +GPRS; 2 GPRS+SMS+CALL 3 GPRS+CALL)	ACCALM,ON,M#	OK;SW=1,MODE=2;